


**Note:** Always use rotary wheel to move needle. Never press or pull directly on needle arm to avoid damages to internal mechanism.

**IMPORTANT NOTES TO BE READ PRIOR TO FIRST TIME USE:**


1. Operate Machine for 10 seconds and then pause for 5 second. It can then be used again regularly.
2. Lift fastening plate and pull out test material. Cut thread close to test material.

**Directions for Use:**

1. Make sure device is in locked position (See diagram #1). Raise the needle arm to the highest position by turning rotary wheel. Note: The rotary wheel can be turned in either direction (see diagram #1)
2. Lift the fastening plate making sure not to push down on the needle arm (the arm can still be moved manually even when the device is in the locked position). Place cloth underneath the fastening plate (see diagram #2). Release fastening plate.
3. Pull at least 2 inches of thread through the needle from back to front, prior to starting to sew.
4. Hold the Stitch Sew Quick™ with right hand. Place thumb by the ON/OFF switch. Utilize other fingers to support the bottom of the device (see diagram #3)

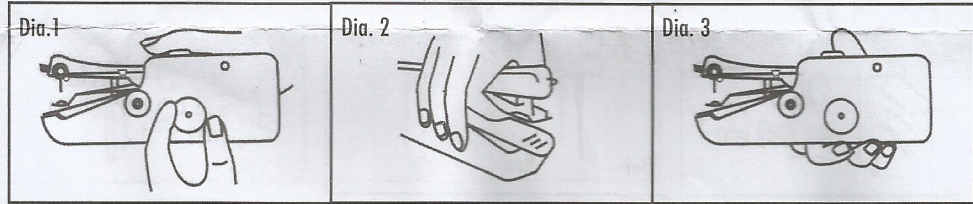


5. Turn the device ON by unlocking the power switch. Use your left hand to hold the cloth and to control the direction and speed as the machine will feed cloth to the left. Be careful not to "rush" the machine or pull the material through the device too quickly. When wider stitches are required, pull cloth to the left a little faster while you continue sewing. Follow the centerline on the cloth fastening plate to ensure straight stitching (see diagram #4)
6. To finish seam- When finished Sewing, raise the needle arm to the highest position by turning the rotary wheel, then use the back of a seam ripper or scissors to pull the thread out about 3 inches. Cut thread (see diagrams #5 & #6)

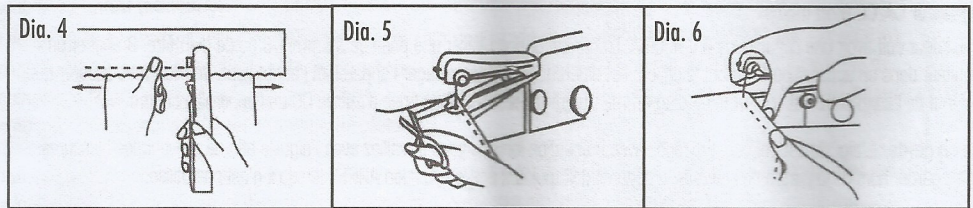

7. Turn the rotary wheel, lowering the needle into the cloth and continue to turn the rotary wheel until the needle arm is again at its highest position

8. Lift up the fastening plate and take off the cloth to the left, making sure not to pull the thread as the seam will unravel

- a. Turn to back side of the cloth and guide the reserved 3 inches of thread according to the following directions and corresponding drawings to make a knot:
- b. First pass threader through the last stitch
- c. Pull the thread through threader
- d. Pull out about 1 inch
- e. Guide the thread through the loop and pull it tight to finish the knot

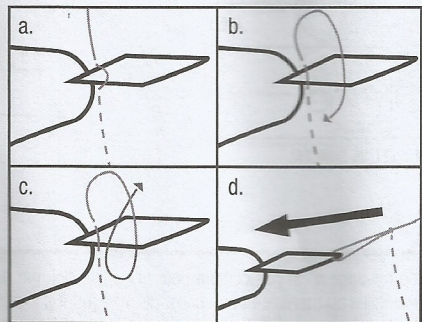


**IMPORTANT DIRECTIONS CONTINUED ON OTHER SIDE.**



## How to Thread Stitch Sew Quick™

*Note: Thread should flow from the top right of bobbin or spool. Spring must be in place before installing bobbin*

1. Thread the device according to the diagrams #'s 7, 8 and 9
2. Pass thread through the eyelet on needle arm (see diagram #7)
3. Pass thread over top of tension control, do not wrap completely around tension control (see diagram #8)
4. Pass needle threader with inserted thread through the eye of the needle, from back to front (see diagram #9). Remove needle threader.

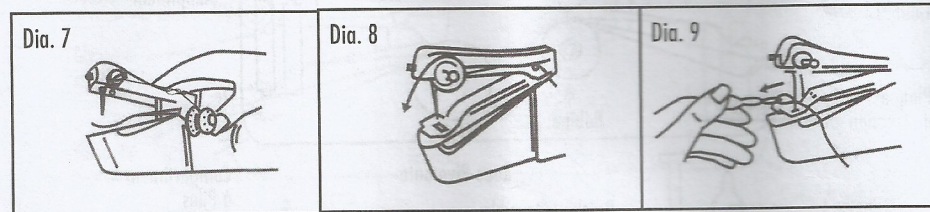

### Adjusting Thread Tension

1. If stitching is too tight, turn tension control slightly to the left
2. If stitching is too loose, turn tension control slightly to the right

### Bobbin Replacement

When purchasing replacement bobbins for the device, please note it uses a class 15 metal bobbin


### To Install a Standard Thread Spool (see diagram #10)

1. Remove spindle and take off bobbin
2. Slide thread spool onto extension spindle
3. Insert extension spindle with spool into machine hole

*Note: Ensure spring is in place before installing spool.*

### To Replace Needle

Loosen the set screw with a screwdriver and take off the old needle. Always use a standard sewing machine needle. Needle must be installed with flat side of needle shank facing the front of the stitch Sew Quick™ (see diagram #11)

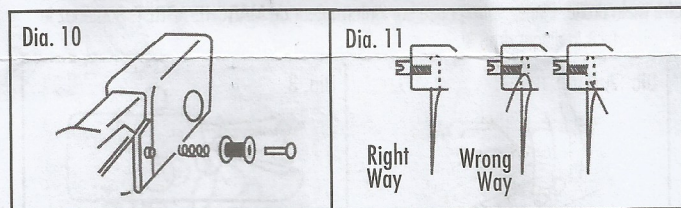

### To replace Batteries (4AA not included)


*Note: Make sure device is in the OFF position prior to battery replacement; Replace all 4 AA batteries as a simultaneous set.*

1. Do not mix old and new batteries
2. Do not mix alkaline, standard (carbon - zinc) or rechargeable (niOcad, niOmh, etc.) batteries.

### AC/DC Adapter (not included)

Adapter must be 6V 800mA. Adapter must use plug with 1/8"/3.5mm diameter. Plugging an adapter into a portable that has different ratings could damage the portable & adapter. Be sure to set the adapters tip polarity to conform to the diagram shown below the sewing device's DC input jack

**Caution:** Needle is a sharp. Use care when working with needle to avoid injury. Keep away from children. When not in use, device should always be kept in the OFF position.

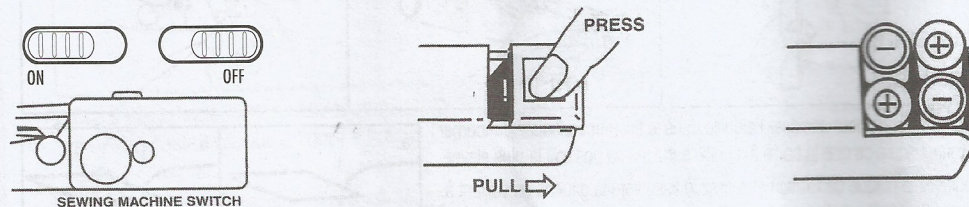

This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the device by a person responsible for their safety. Children should be supervised to ensure that they do not play with the device.