

DIGITNOW!

Living & Loving Technology

M46 User Manual



WIRELESS BT TURNTABLE
BANDEJA GIRADISCOS BT

M46 - USER MANUAL

ENGLISH

Thanks for purchasing Panacom Suitcase Turntable .Please read this manual carefully before using this Turntable.

Important Safety Information

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting to the mains supply.
- This appliance is not intended for use by persons (including children) who are not mentally able, physically capable, experienced or do not understand the product. - They should be given supervision and instruction in the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not leave appliance unattended whilst connected to the mains supply
- To reduce the risk of electric shock, do not use outdoors or on wet surfaces.
- Do not immerse in water or any other liquids.
- Unplug the appliance from mains outlet when not in use and before servicing.
- Do not unplug by pulling the cord. To unplug, grasp the plug, not the cord.
- Do not use the appliance with a damaged mains cord or plug.

- Do not pull the mains cord, close the door on it or run it over sharp edges.
- Do not use if unit has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place user at serious risk
- Place the unit on sound, level surface free of vibrations and away from sources of heat.
- Do not leave unit plugged in for long periods.
- Do not use with wet hands.
- Do not put objects into openings.
- Keep free of dust, lint, hair, etc.
- Keep hair, loose clothing, fingers and all parts of the body away from moving parts.
- Do not use this unit for anything other than its intended use.
- Never place unit on top of or near loudspeakers as acoustic feedback will occur.

Getting Started

Remove unit from the box

Remove any packaging from the product carefully.

Place packaging inside the box and either store or dispose of safely and correctly.

Contents

Suitcase Turntable

Instruction manual

RCA cable

DC Adaptor


Warranty Card

Features

- Two-built-in stereo anti-magnetic speakers;
- 3 speeds belt-driven turntable fit for 33 1/3, 45, 78;
- USB/SD slot for MP3 playback;
- Wireless BT Connection;
- AUX Input;
- Earphone Output;
- FM radio frequency adjustment;
- Plays and records Audio files to a USB flash drive;
- Converts LPs to Audio files without the need of a computer;
- Stereo RCA outputs to enjoy vinyl records through your home stereo speakers;
- DC power supply;
- Electronics control panel.

FUNCTIONS AND CONTROLS

- 1. Tone arm
- 2. Play/Pause lift lever
- 3. Auto stop on/off switch
- 4. Speed selector
- 5. Power Switch & Volume Control
- 6. Cartridge/Stylus
- 7. Turntable
- 8.45 Single adaptor
- 9. Function Main Menu
- 10. Play/PAUSE/FM TUNING
- 11. Earphone output
- 12. SD CARD interface
- 13. USB-DISK interface
- 14. Power indicator
- 15. Delete
- 16. Recording
- 17. PREV
- 18. Next
- 19. Display screen
- 20. Hi-fi speaker
- 21. AUX-in
- 22. AUX-R Out
- 23. AUX-L Out
- 24. Power in

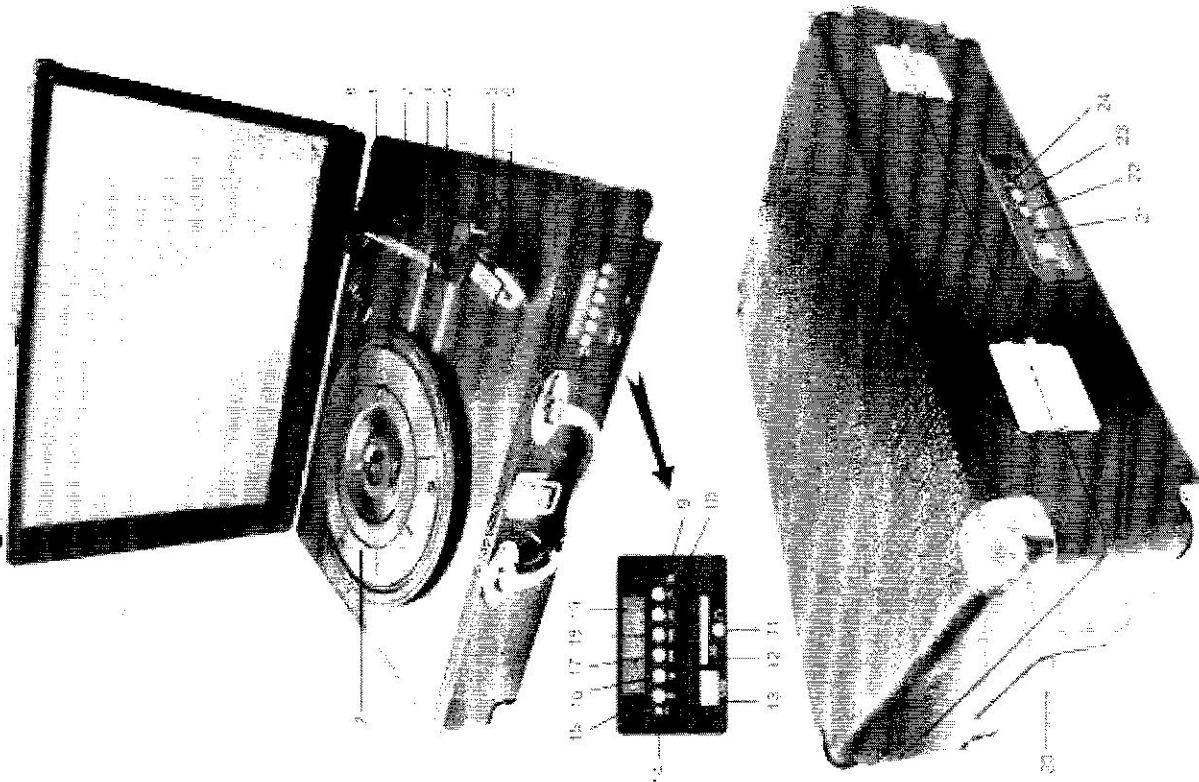

Operation

1. Starting Up

Turned on the power, the power indicator lights is red, it's default to LP mode for the first time. Press M button the function selector to LP, USB, SD, FM, BT, AUX playing function. Now your system is ready to play the music.

2. LP Playing

Press "M" key to choose LP function, then put LP and needle to play directly. Record the LP firstly need to insert USB-DISK/SD Card then press "Button Rec" key to begin recording and press "Button Rec" key again to stop recording.

3. USB/SD Playing

Press "M" key to choose USB/SD MP3 function, press "play" can

short press "Button Previous" to play Previous song and short press "Button Next" to play Next song. Long press "Button Delete" to delete single song which implement this function need to insert the USB - DISK/SD.

4.FMRadio Playing

Press "M" key to choose FM function, then press "Button Play" to scan FM frequencies.

Press "Button Previous" to play Previous channel and "Button Next" to play Next channel.

Record the program firstly need to insert USB-DISK/SD CARD then press "Button Rec" key to begin recording and press "Button Rec" key again to stop recording.

5. Wireless BT Connection Playing

Press "M" key to choose Wireless BT Connection Playing function, LED screen displays BLUE information. After connect the device successfully, press "Button Play" can play/pause, short press "Button Previous" to play Previous song and short press "Button Next" to play Next song.

6.AUX Playing

Press "M" key to choose AUX mode, LED screen displays AUX information.

Record the program firstly need to insert USB-DISK/SD CARD then press "Button Rec" key to begin recording and press "Button Rec" key again to stop recording.

Special explanation:


1. Insert both of USB/SD equipment as record media, the default record media is SD devices.
2. Such as insert SD card when use USB media playing will automatically switch to the SD card media playing and vice versa.

HOW TO REPLACE THE NEEDLE

To replace the needle, please refer to the instructions below. Removing the needle form the cartridge.

1. Place a screwdriver at the tip of the needle heads hell and push downwards in the direction shown in sketch "A"
2. Remove the needle head shell by pulling it forwards and pushing downwards.

Inserting the needle

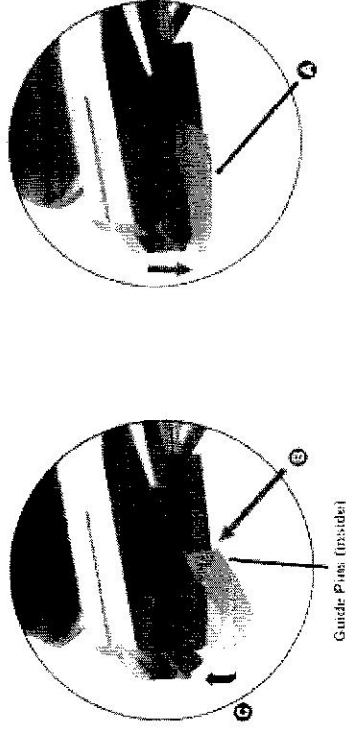

1. Hold the tip of the needle head shell and insert it by pressing in the direction illustrated by "B"
2. Push the needle head shell upwards in the direction illustrated by "C" until the needle locks into the tip position.

HOW TO REPLACE THE STYLUS

- Hold the tone arm with one hand to support it as you take either side of the stylus with your thumb and forefinger of the other. Gently pull the stylus forward slightly then move it down-

wards then pull clear.

- Fitting a new stylus is the reverse of removal
- NOTE: Never play records with a worn or damaged Stylus.

Do's and don'ts

- Do not place unit on top of or near loudspeakers as acoustic feedback will occur.
- Do not play badly worn or chipped records.
- Ensure Stylus is clean and free of fluff and dust.

Care and Maintenance

- Clean the unit with a soft, damp lint free cloth, never use chemicals or harsh abrasives.
- Use a good quality record cleaner to optimise results.

Setting up the suitcase Turntable

- Remove all packaging from the unit.
- Ensure that the security latch is closed so that the tone arm is not free to move.
- Ensure unit is on a solid level surface, away from sources of heat, sunlight, etc.
- Remove the protective stylus guard from the tone arm cartridge by gently pulling forwards.