



## For Safe Usage

Read these instructions and warnings before use and keep them in a safe place for future reference.

### Health Concerns

#### Epilepsy Warning

A very small percentage of individuals may experience epileptic seizures when exposed to certain light patterns or flashing lights. Exposure to certain light patterns or backgrounds on a television screen or while playing video games may induce an epileptic seizure in these individuals. Certain conditions may induce undetected epileptic symptoms even in persons who have no history of prior seizures or epilepsy. If you, or anyone in your family, has an epileptic condition, consult your physician prior to playing. If you experience any of the following symptoms while playing a video game: dizziness, altered vision, eye or muscle twitches, loss of awareness, disorientation, any involuntary movement, or convulsions, IMMEDIATELY discontinue use and consult your physician before resuming play.

#### Immediately stop playing in the following cases

In addition to the above symptoms, if you experience headache / dizziness / nausea / fatigue / motion sickness like symptoms, or pain / discomfort in parts of the body such as eyes / ears / hands / arms / legs, please stop playing IMMEDIATELY. If the symptoms persist, see a doctor.

#### To avoid injury:

- Brighten the room when playing and sit or stand as far from the screen as the cord will allow.
- Avoid playing when overly tired or lacking sleep.
- For your own health, take a break for about 15 minutes of every hour of gameplay.
- If you feel sick while playing, stop playing immediately.


### Notes on Usage

SEGA Genesis Mini is precision electronic equipment. During use, pay particular attention to the following:

#### To prevent fire, electric shock, injury, damage to household goods or equipment:

- Do not use, install or store in the following places:
  - Areas exposed to high temperatures, such as in direct sunlight or near a stove
  - Unstable surfaces
  - Areas exposed to dust, moisture or water
  - Keep out of reach of small children.
- Keep the console and cables away from moisture. If they are exposed to liquid, stop using immediately and contact customer support.
- Do not insert foreign objects into the console. If any foreign objects get into the console, stop using immediately and contact customer support.
- Do not drop or hit the console and accessories. Do not forcefully bend or pull the connection cord.
- Clean the terminals and plug regularly with a dry cloth or cotton swab.
- Do not disassemble the console and accessories.
- Do not unplug the AC adapter from the electric outlet or disconnect the USB cable from the AC adapter while the console Power Switch is set to ON.
- Condensation may form when brought from a cold outside into a heated room. If condensation occurs, place console in a warm room with the power off until fully dry.
- Do not use chemicals such as benzine or thinner when wiping off dirt.
- When disposing of this product, do so in accordance with municipal waste guidelines.
- Do not connect devices other than supported peripherals to the console, as doing so may cause failure. Damage caused by unsupported devices is not eligible for warranty support.

## Connection and Start Up

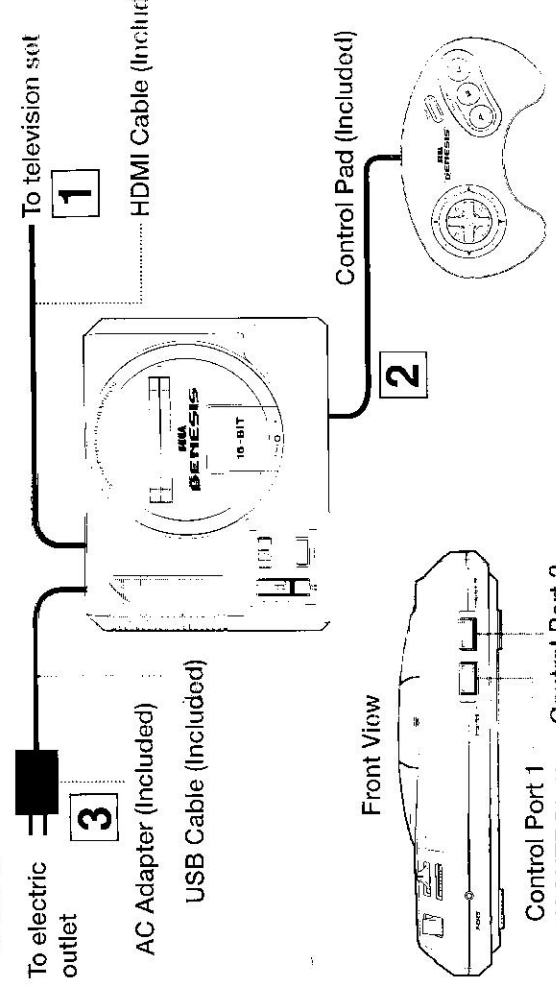

Please connect in the following order, as per the above diagrams.

- 1 Connect your SEGA Genesis Mini console to a television set via the HDMI cable.
- 2 Connect the Control Pad(s) to the console.
  - \* When using one Control Pad, connect it to Control Port 1. When using two Control Pads, connect them to Control Ports 1 and 2 respectively.
- 3 Connect the console to the AC adapter, then plug the adapter into an electric outlet.

### Console Switches, Sliders and Buttons

- ★ Slide the Power Switch left (ON), and the Power-On Indicator will light showing the console has power.
- ★ The Cartridge Slot opens and closes, but "SEGA Genesis" cartridges cannot be inserted and played.
- ★ The Headphone Volume Control moves, but does not affect the output volume.
- ★ The Reset Button is used to reset the game.

### During Gameplay

Slide the Power Switch to ON to power up the console. Use the Control Pad to start up each game. To prevent console damage or data loss when you finish playing, be sure to slide the Power Switch to OFF before disconnecting the AC adapter or USB cable.

- ★ Please check the manual for each game for gameplay instructions: <https://manuals.sega.com/genesismini/>
- ★ Hold START on the Control Pad during gameplay to access the System Menu. There you can save, load, or return to the Menu.