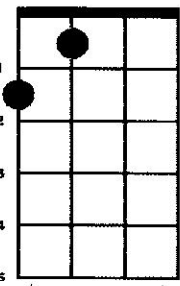 
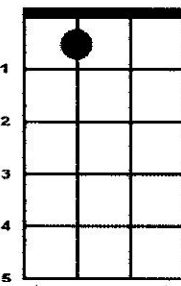 
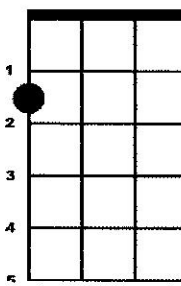 
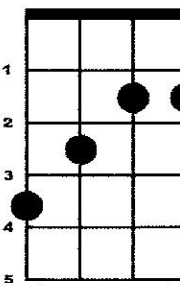 
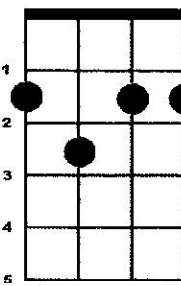 
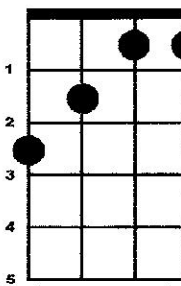 
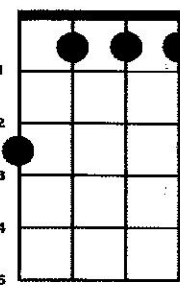 
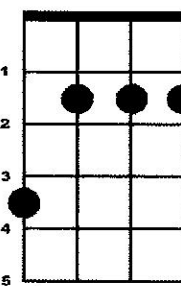 
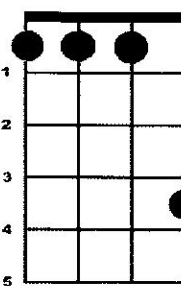 
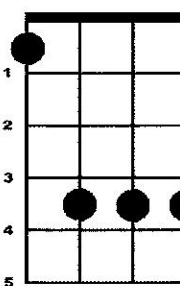 
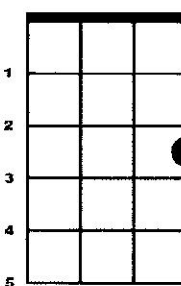 
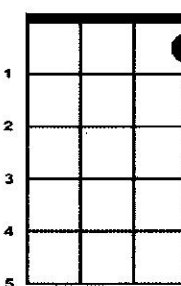 
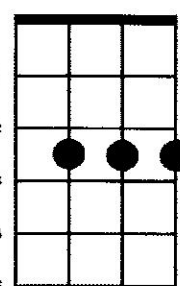 
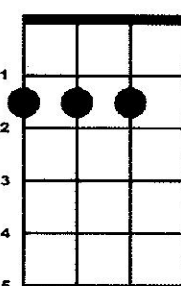 
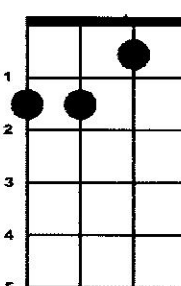 
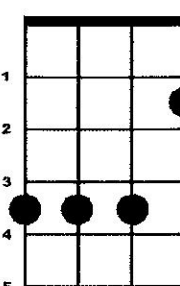 
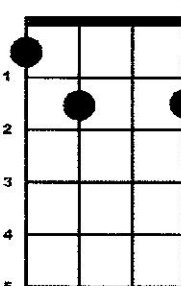 
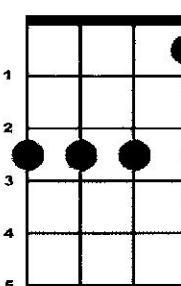 
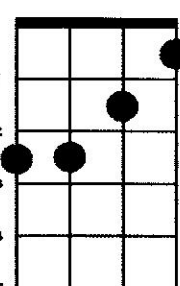 
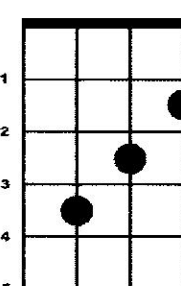 
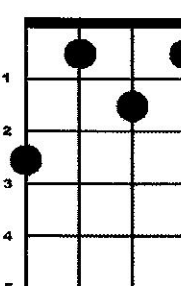 
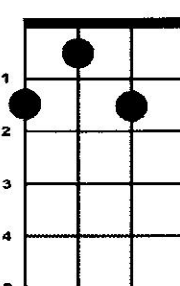 
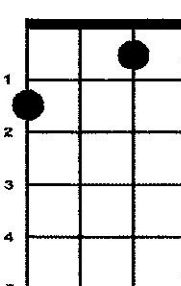 
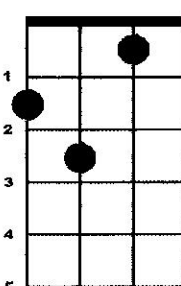 
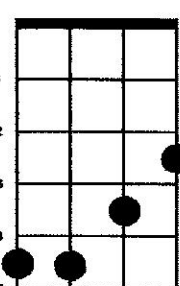 
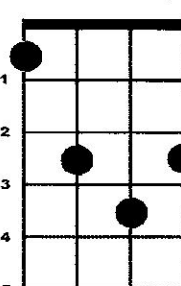 
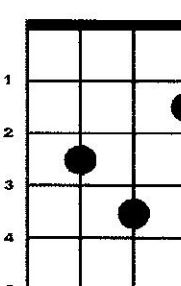 
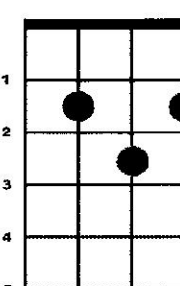 
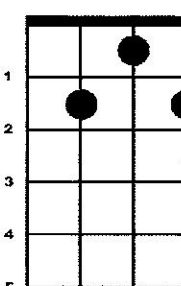 
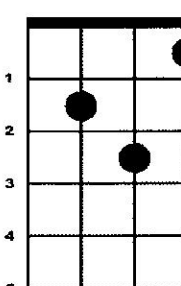 


Ukulele Basic Chords

Ranch Ukulele

| | | | | | |
|---|--|---|---|--|--|
| <p>A</p>  | <p>A7</p>  | <p>Am</p>  | <p>B</p>  | <p>B7</p>  | <p>Bb</p>  |
| <p>Bbm</p>  | <p>Bm</p>  | <p>C#</p>  | <p>C#m</p>  | <p>C</p>  | <p>C7</p>  |
| <p>Cm</p>  | <p>D</p>  | <p>Dm</p>  | <p>E</p>  | <p>E7</p>  | <p>Eb</p>  |
| <p>Ebm</p>  | <p>Em</p>  | <p>F#</p>  | <p>F#m</p>  | <p>F</p>  | <p>F7</p>  |
| <p>Fm</p>  | <p>G#</p>  | <p>G#m</p>  | <p>G</p>  | <p>G7</p>  | <p>Gm</p>  |

 
Manual

Thanks for purchasing our products, please read this manual carefully before using your new tuner.

I. Warning

1. Do not disassemble or repair this tuner by yourself.
2. Do not use or store the tuner in areas with high temperature, high humidity, high dust or areas susceptible to static or electric shock.
3. Do not drop this tuner.
4. Do not use strong cleaners or solvents to clean this tuner.

II. Part names and functions

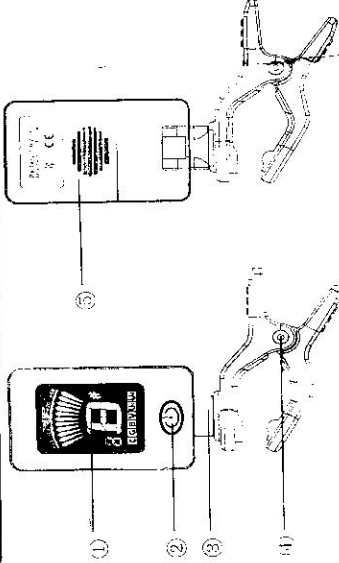

1. LCD Screen: Displays operations
2. Function Button: Changes functions of the unit
3. AXIS
4. Clip: Use to attach to instrument
5. Battery Compartment

III. Replace Battery

Please load in the battery (included in the package) by following steps.

1. Press the front of the battery cover and then slide back to remove cover.
2. Put the battery into compartment with negative pole facing inward. Please insert the front of cover then push to close, can also use equipped screw to lock the cover.
3. After inserting the battery, the unit will be on and in tuner mode.
4. The tuner will be power off automatically after 3 minutes if no operation.

IV. Functions and Operation

| | | |
|--|---------------------|--------------------------|
| Button | Press | Press and hold 2 seconds |
|  | Select Tuning Items | Power ON/OFF |

V. How to Tune

1. Get the machine ready for tuner as what you want by following: IV. Functions and Operation.
2. Clip the tuner onto your instrument. Adjust the tuner for best viewing angle.
3. The tuner displays note name and accuracy when you play the instrument: if indicator points left, the note is flat; if indicator points right, the note is sharp; the note is in tune if indicator says vertical and the screen in green.

* The tuner MUST be clipped onto your instrument to tune.

VI. Specifications

A4 Frequency: 440Hz
Tuning Item: Chromatic, Guitar, Bass, Violin, Ukulele C, Ukulele D
Tuning Range: 0A(27.5Hz)-8C(4186.0Hz)
Weight: 19g
Dimension: 50(L) X 26(W) X 76(H)mm
Notice: Ukulele C is for standard mode (4G 3C 2E 1A)
Ukulele D is one note higher (4A 3D 2F# 1B)

VII. Accessories

Manual
Battery: CR2032, 1 piece